


## Draytek 2860 Series - Firmware Update

Please visit <https://www.draytek.co.uk/support/downloads/vigor-2860>  
Here, you can download the **Recommended Firmware Version**

**Firmware, Driver, Guides & Utility Downloads**

**Support**

### Vigor 2860 Series



#### Firmware Information




Current Version	<a href="#">3.8.8BT</a> <a href="#">Release Notes</a>
Release Date	18/05/2018
Support Language	English
Supported Models	Vigor 2860 Vigor 2860n Vigor 2860Vn Vigor 2860n-Plus Vigor 2860Vn-Plus Vigor 2860ac Vigor 2860Vac Vigor 2860L Vigor 2860Ln

**IMPORTANT NOTE :**  
The firmware we recommend is 3.8.8\_BT . This version supports vectoring and uses modem code 576D17.

Firmware is normally supplied in two different styles: The **ALL** file will just upgrade the firmware, whereas the **RST** file will upgrade the firmware and wipe all settings back to factory defaults.

[Home](#) > [Support](#) > [Downloads](#) > [Vigor 2860](#)

Model Search:

	<a href="#">Release Notes for Vigor 2860 Firmware 3.8.8 BT</a>	Size 174.1 KB	<a href="#">Download</a>
MD5 Checksum : 68b3039067b90e646c1c644b93696118      SHA1 Checksum : d5e979a4f5b10023d1eb843daa86ba9e1173254			
	<a href="#">User Guide V4.5 for Vigor 2860 Series</a>	Size 13.54 MB	<a href="#">Download</a>
MD5 Checksum : dc63bae4911cfe0e9e4722afd4b3cdc1      SHA1 Checksum : c6e0f44f65ed89a17e5bcb94d58f15cef8323d			
	<a href="#">Vigor 2860 Firmware 3.8.8 BT - Recommended</a>	Size 33.26 MB	<a href="#">Download</a>
MD5 Checksum : 764f32aa53f86911e63e07533a12eaa3      SHA1 Checksum : 525f757e3c2790be6b62e5963c65dbe5160309d1			

Use your default internet browsing software and browse to the IP address of the router, this is usually **192.168.1.1**

The default login details are:

- **Username: admin**
- **Password: guw4Xa0KA**



The login page for the DrayTek Vigor2860 Series router. It features a 'Login' header, fields for 'Username' and 'Password', and a 'Login' button. A message below the password field states: 'The username or password you entered is incorrect.' The footer contains the copyright notice: 'Copyright © 2000- 2017 DrayTek Corp. All Rights Reserved.'

After logging in this page should be displayed.

The screenshot shows the DrayTek Vigor2862Ln web interface dashboard. On the left is a sidebar menu with categories like Dashboard, WAN, LAN, VPN, and Support Area. The main content area is titled 'Dashboard' and displays various system information and status tables.

**System Information**

Model Name	Vigor2862Ln	System Up Time	0:03:53
Router Name	DrayTek	Current Time	Sat Jan 01 2000 00:03:43
Firmware Version	3.8.8_BT	Build Date/Time	Feb 14 2018 12:58:38
DSL Version	779517_A/B/C HW: A	LAN MAC Address	00-1D-AA-70-A7-C8

**IPv4 LAN Information**

	IP Address	DHCP		IP Address	DHCP
LAN1	192.168.1.1/24	v	LAN2	192.168.2.1/24	v
LAN3	192.168.3.1/24	v	LAN4	192.168.4.1/24	v
LAN5	192.168.5.1/24	v	LAN6	192.168.6.1/24	v
LAN7	192.168.7.1/24	v	LAN8	192.168.8.1/24	v
DMZ PORT	192.168.17.1/24	v	IP Routed Subnet	192.168.0.1/24	v

**IPv4 Internet Access**

	Line / Mode	IP Address	MAC Address	Up Time
WAN1	ADSL / PPPoA	Disconnected	00-1D-AA-70-A7-C9	00:00:00
WAN2	Ethernet / DHCP Client	Disconnected	00-1D-AA-70-A7-CA	00:00:00
LTE	USB / ---	Disconnected	00-A0-C6-00-00-55	00:00:00
WAN4	USB / ---	Disconnected	00-1D-AA-70-A7-CC	00:00:00

**Interface**

DSL	Connected : Down Stream : 0Kbps / Up Stream : 0Kbps
WAN	Connected : 0, WAN1, WAN2, LTE, WAN4
LAN	Connected : 0, Port1, Port2, Port3, Port4, Port5
WLAN	Connected : 0
USB	Connected : 0, USB

**Security**

VPN	Connected : 0	Remote Dial-In User / LAN to LAN
MyVigor	Activate : 0	
DoS	Attack Detected :	

**System Resource**

Current Status	CPU Usage: 8%
	Memory Usage: 83%

User Mode is OFF now.  
Customize Dashboard

**Quick Access**

- System Status
- Dynamic DNS
- TR-069
- User Management
- IM/P2P Block
- Schedule
- SysLog / Mail Alert
- LDAP
- RADIUS
- Firewall Object Setting
- Data Flow Monitor

On this page, Select **System Maintenance**.

Next select **Firmware Upgrade**

The screenshot shows the 'System Maintenance' menu with the following options:

- System Status
- TR-069
- Administrator Password
- User Password
- Login Page Greeting
- Configuration Backup
- SysLog / Mail Alert
- Time and Date
- SNMP
- Management
- Panel Control
- Self-Signed Certificate
- Reboot System
- Firmware Upgrade**
- Firmware Backup
- Modem Code Upgrade
- Activation
- Internal Service User List
- Dashboard Control

This will bring up the Firmware Upgrade page.

On this page, click **Choose File** and select the Firmware Upgrade file that has been downloaded earlier.

When finished click **Upgrade**, this will reboot the router.

System Maintenance >> Firmware Upgrade



#### Firmware Version Status

Current Firmware Version: 3.8.8\_BT

[Check The Latest Firmware](#)

#### Web Firmware Upgrade

Select a firmware file.

[Choose File](#) no file selected

Click Upgrade to upload the file.

[Upgrade](#)

#### TFTP Firmware Upgrade from LAN

##### Firmware Upgrade Procedures:

1. Click "OK" to start the TFTP server.
2. Open the Firmware Upgrade Utility or other 3-party TFTP client software.
3. Check that the firmware filename is correct.
4. Click "Upgrade" on the Firmware Upgrade Utility to start the upgrade.
5. After the upgrade is complete, the TFTP server will automatically stop running.

Do you want to upgrade firmware ?

[OK](#)

#### Note:

Upgrade using the ALL file will retain existing router configuration, whereas using the RST file will reset the configuration to factory defaults.